

User Manual

WOXCON

NPG-MX88E-H2 KIT

8x8 HDMI 2.0 Matrix with 6 Receivers

Audio Breakout & Downscaling



All Rights Reserved

Version: NPG-MX88E-H2_2020V1.0

Preface

Read this user manual carefully before using the product. Pictures shown in this manual are for reference only. Different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till November, 2020. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



SAFETY PRECAUTIONS

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

Table of Contents

| | |
|--|----|
| 1. Introduction | 1 |
| 1.1 Features | 1 |
| 1.2 Package List | 1 |
| 2. Specification | 3 |
| 3. Panel Description | 6 |
| 3.1 Front Panel | 6 |
| 3.2 Rear Panel | 7 |
| 4. System Connection | 8 |
| 4.1 Usage Precaution | 8 |
| 4.2 System Diagram | 8 |
| 5. Panel Button Control | 9 |
| 5.1 I/O Connection Switching | 9 |
| 5.2 LOCK Function | 9 |
| 6. IR Remote Control | 10 |
| 7. GUI Control | 11 |
| 7.1 Switching Tab | 12 |
| 7.2 Audio Tab | 13 |
| 7.3 Configuration Tab | 14 |
| 7.4 CEC Tab | 17 |
| 7.5 RS232 Tab | 19 |
| 7.6 Interface Tab | 20 |
| 7.7 Network Tab | 21 |
| 7.8 Access Tab | 22 |
| 7.9 GUI Upgrade | 23 |
| 8. RS232 Control | 24 |
| 8.1 RS232 Control Software | 24 |
| 8.2 Basic Settings | 24 |
| 8.3 RS232 Communication Commands | 26 |
| 8.3.1 System Commands | 26 |
| 8.3.2 Control Management | 26 |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| | |
|---|----|
| 8.3.3 Query Commands | 28 |
| 8.3.4 Lock/unlock Commands..... | 31 |
| 8.3.5 Audio Commands..... | 32 |
| 8.3.6 HDCP Compliance | 32 |
| 8.3.7 EDID Management..... | 35 |
| 8.3.8 CEC Control | 37 |
| 9. Firmware Upgrade..... | 39 |
| 10. Troubleshooting and Maintenance | 40 |
| 11. Customer Service | 42 |

8x8 HDMI V2.0 Matrix with Audio Breakout/ Downscaling

1. Introduction

The NPG-MX88E-H2 is a professional 8x8 HDMI V2.0 Matrix Switcher with audio breakout. It includes 8 HDMI inputs, 2 HDMI outputs and 6 CATx extension outputs with a HDMI loop out. HDMI signal is extended up to 70m over single CATx cable. All the HDMI outputs support down-scaling function. It also features SPDIF and analog audio outputs for audio breakout.

The matrix switcher features comprehensive EDID management and advanced HDCP handing to ensure maximum functionality with a wide range of video sources.

The matrix switcher not only supports bi-directional IR, RS232 control but also TCP/IP control with Web GUI.

1.1 Features

- 8x8 HDMI V2.0 Matrix Switcher.
- Supports 4K/60 4:4:4, HDR, HDCP2.2.
- 4K/ 1080p HDMI signal extension up to 70m.
- Audio out can be de-embedded from any outputs.
- HDMI outputs support 4K to 1080p down-scaling.
- Controllable by front panel, IR, RS232 and TCP/IP.
- CATx outputs support 12V PoC power for receivers.
- Supports bi-directional IR pass-through.

1.2 Package List

- 1x NPG-MX88E-H2
- 2x Mounting ears with 6 screws
- 4x Plastic cushions
- 8x IR receiver
- 8x IR emitter
- 1x IR remote
- 1x RS232 cable (3-pin to DB9)
- 1x Power adaptor (DC 24V 5A)
- 1x User manual
- 6x NPG-EX60R-H2

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

- 6x Velcro Strip

-

Note: Please contact your distributor immediately if any damage or defect in the components is found.

8x8 HDMI V2.0 Matrix with Audio Breakout/ Downscaling

2. Specification

| Video | |
|----------------------------|---|
| Video Input | (8) HDMI |
| Input Connector | (8) Type-A female HDMI |
| HDMI Input Resolution | Up to 4K@60Hz 4:4:4, HDR |
| Video Output | (6) CATx, (3) HDMI |
| Output Connector | (6) RJ45, (3) Type-A female HDMI |
| HDMI Output Resolution | Up to 4K@60Hz 4:4:4, HDR10 |
| CATx Output distance | Up to 70m |
| HDCP Version | Up to 2.2 |
| HDMI Audio Signal | LPCM 7.1 audio, Dolby Atmos®, Dolby® TrueHD, Dolby Digital® Plus, DTS:X™, and DTS-HD® Master Audio™ pass-through. |
| Audio Output | |
| Output | (1) Digital SPDIF audio, (1) Analog stereo audio |
| Output Connector | (1) Toslink connector, (1) 3.5mm Jack |
| Digital SPDIF Audio Format | Supports PCM, Dolby Digital, DTS, DTS-HD |
| Analog Stereo Audio Format | Supports PCM |
| Frequency Response | 20Hz – 20KHz, ±3dB |
| Max Output Level | ±0.05dBFS |
| THD+N | < 0.1%, 20 Hz – 20 kHz bandwidth, 1 kHz sine at 0dBFS level (or max level) |
| SNR | > 90dB, 20Hz-20KHz bandwidth |
| Crosstalk Isolation | < -70 dB, 10 kHz sine at 0 dBFS level (or max level before clipping) |
| Noise | -90dB |
| Control | |
| Control port | (1) IR EYE, (1) RS232, (1) TCP/IP, |
| Control Connector | (1) 3.5mm jack, (1) 3-pin terminal block, (1) RJ45 |
| General | |
| Transmission Distance | 4K/60Hz/444 5m,4K/60Hz/420 10m,1080P 15m |
| Bandwidth | 18Gbps |
| Operation Temperature | -5°C ~ +55°C |
| Storage Temperature | -25°C ~ +70°C |
| Relative Humidity | 10% ~ 90% |
| External Power Supply | Input: AC 100V~240V, 50/60Hz; Output : 24V DC 2.71A |
| Power Consumption | 48W |
| Dimension (W*H*D) | 436mm*44mm*180mm |
| Net Weight | 2.35kg |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Receiver | |
|-----------------------|--|
| Input | (1) CATx IN |
| Input Connector | (1) RJ45 |
| Output | (1) DISPLAY |
| Output Connector | (1) 19-pin type-A female HDMI |
| Control | (1) IR IN, (1) IR OUT |
| Control Connector | (2) 3.5mm mini jacks |
| General | |
| Video Resolution | Up to 4K@60Hz 4:4:4, HDR 10 |
| HDMI Audio Format | Supports LPCM 2ch, LPCM 5.1ch, LPCM 7.1ch, Dolby Digital 2ch, Dolby Digital 5.1ch, DTS 2ch, DTS 5.1ch, DTS 96/24 5.1ch. |
| Transmission Distance | 4K/1080p ≤ 70 meters (230ft) <i>Note that the CATx cable length should not be less than 15 meters for best video output..</i> |
| HDMI Version | HDMI V2.0 |
| HDCP Version | HDCP 2.2 compliant. (The HDCP of output follows the HDCP version of display device.) |
| EDID | EDID management |
| Power Supply | Input: 100VAC~240VAC, 50/60Hz; Output: 12VDC 1A |
| Power Consumption | 4W (Max) |
| Operation Temperature | -5~55°C |
| Storage Temperature | -25~70°C |
| Relative Humidity | 10%-90% |
| Dimensions (W*H*D) | 80mm x 16.8mm x 80mm |
| Net Weight | 70g |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling


Video Resolution Down-scaling:

The matrix supports video resolution downscaling on HDMI outputs. 4K (4096x2160/3840x2160) input can be automatically degraded to 1080p output for compatibility with 1080p display, shown in the below chart.

| # | Input | | | Output | |
|----|------------|---------|-------------|-----------|------------------|
| | Resolution | Refresh | Color Space | Downscale | 1080p Specs |
| 1 | 4K | 60Hz | 4:4:4 | Support | 1080p@60Hz 4:4:4 |
| 2 | 4K | 50Hz | 4:4:4 | Support | 1080p@50Hz 4:4:4 |
| 3 | 4K | 30Hz | 4:4:4 | Support | 1080p@30Hz 4:4:4 |
| 4 | 4K | 25Hz | 4:4:4 | Support | 1080p@25Hz 4:4:4 |
| 5 | 4K | 24Hz | 4:4:4 | Support | 1080p@24Hz 4:4:4 |
| 6 | 4K | 23Hz | 4:4:4 | Support | 1080p@23Hz 4:4:4 |
| 7 | 4K | 60Hz | 4:2:0 | Support | 1080p@60Hz 4:4:4 |
| 8 | 4K | 50Hz | 4:2:0 | Support | 1080p@50Hz 4:4:4 |
| 9 | 4K | 30Hz | 4:2:0 | Support | 1080p@30Hz 4:4:4 |
| 10 | 4K | 25Hz | 4:2:0 | Support | 1080p@25Hz 4:4:4 |
| 11 | 4K | 24Hz | 4:2:0 | Support | 1080p@24Hz 4:4:4 |
| 12 | 4K | 23Hz | 4:2:0 | Support | 1080p@23Hz 4:4:4 |
| 13 | 4K | 60Hz | RGB | Support | 1080p@60Hz RGB |
| 14 | 4K | 50Hz | RGB | Support | 1080p@50Hz RGB |
| 15 | 4K | 30Hz | RGB | Support | 1080p@30Hz RGB |
| 16 | 4K | 25Hz | RGB | Support | 1080p@25Hz RGB |
| 17 | 4K | 24Hz | RGB | Support | 1080p@24Hz RGB |
| 18 | 4K | 23Hz | RGB | Support | 1080p@23Hz RGB |

3. Panel Description


3.1 Front Panel



| No. | Name | Description |
|-----|---|---|
| ① | Power Indicator | <ul style="list-style-type: none"> • Illuminates green when device powered on; • Turns red in standby mode. |
| ② | Lock Button & Indicator | <ul style="list-style-type: none"> • Long press more than 3 seconds to lock/ unlock the front panel buttons. • Indicator illuminates red when front panel is locked. |
| ③ | Output Select Button & Input Indicator | <ul style="list-style-type: none"> • Total 8 output selector buttons, press the buttons to toggle input signal. • The indicator will turn green if the corresponding input is selected. |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

3.2 Rear Panel

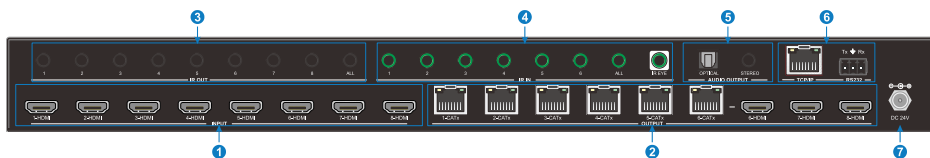

| No. | Name | Description |
|-----|---------------------------|--|
| ① | INPUTS | 8 HDMI inputs, connects with HDMI sources. |
| ② | OUTPUTS | 5 CATx outputs, connects with the receivers. The No.5 output has a HDMI loop out. 3 HDMI outputs, connects with HDMI displays. |
| ③ | IR OUT | 8 IR outputs and 1 IR all-out, work with the receivers to support IR pass-through. |
| ④ | IR IN | 6 IR inputs and 1 IR all-in, work with the receivers to support IR pass-through. 1 IR EYE input, connects with external IR receiver for using the IR remote to control the Matrix Switcher. |
| ⑤ | AUDIO OUTPUTS | OPTICAL & STEREO audio output ports for audio de-embedded from HDMI output. Two audio output ports are de-embedded from the same video output. |
| ⑥ | TCP/IP & RS232 | TCP/IP: RJ45 port to connect the control device (e.g. PC) to control the matrix by GUI. RS232: 3-pin terminal block to connect the RS232 control device (e.g. PC) or a device to be controlled by RS232 commands. |
| ⑦ | DC 24V | Connect with 24VDC power adaptor. |


8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

4. System Connection

4.1 Usage Precaution

- Make sure all components and accessories included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on.

4.2 System Diagram

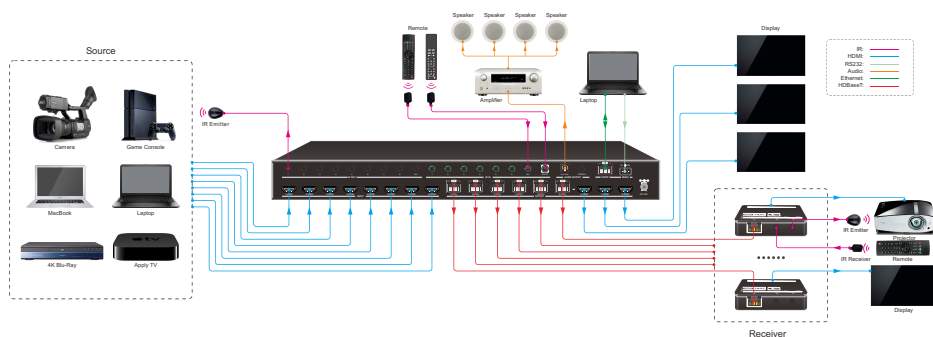

5. Panel Button Control

5.1 I/O Connection Switching

The front panel features eight output selection buttons, each one has 8 input indicators. Press the button to toggle from input 1 to input 8. If the HDMI input is selected, the corresponding indicator will turn green.

5.2 LOCK Function


Long press the **LOCK** button for three seconds, all buttons on the front panel disable to work. At the same time, the LOCK indicator will turn red.

Long press the **LOCK** button for three seconds again, the front panel button will unlock.

6. IR Remote Control

The Matrix Switcher features one **IR EYE** port on rear panel to receive IR signal from IR remote to enable IR control.

- ① Standby button:
Press it to enter/ exit standby mode.
- ② INPUTS:
Input channel selection buttons, same with the corresponding front panel buttons
- ③ OUTPUTS:
Output channel selection buttons, same with the corresponding front panel buttons.
- ④ Menu buttons:
 - **ALL**: Select all inputs/outputs.
To convert an input to all outputs:
Example: Input 1 to all Outputs:
→ Press INPUTS 1 + ALL + ENTER
 - **EDID management button**:
 - 1) One input port follows the EDID data from one output port.
Example: Input 2 learns EDID data from output 4:
→ Press EDID + INPUTS 2 + OUTPUTS 4+ ENTER
 - 2) All input ports learn EDID data from one output port.
Example: All input ports learn EDID data from output 3:
→ Press EDID + ALL + OUTPUTS 3 + ENTER
 - **CLEAR**: Withdraw button.
 - **ENTER**: Confirm operation.

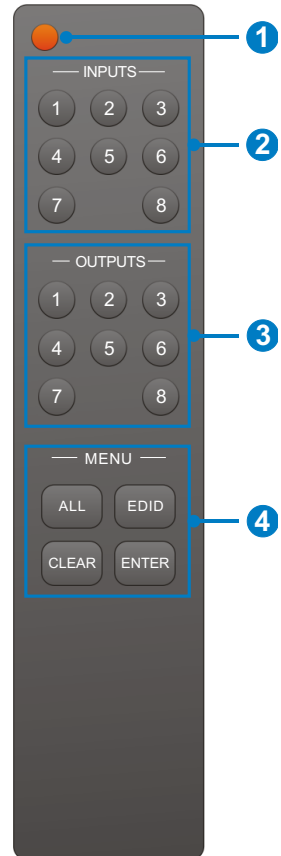

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling


7. GUI Control

The matrix switcher can be controlled by web GUI via TCP/IP port. The default IP settings are:

IP Address: 192.168.0.178

Subnet Mask: 255.255.255.0

Type **192.168.0.178** in the internet browser, it will enter the below log-in webpage:

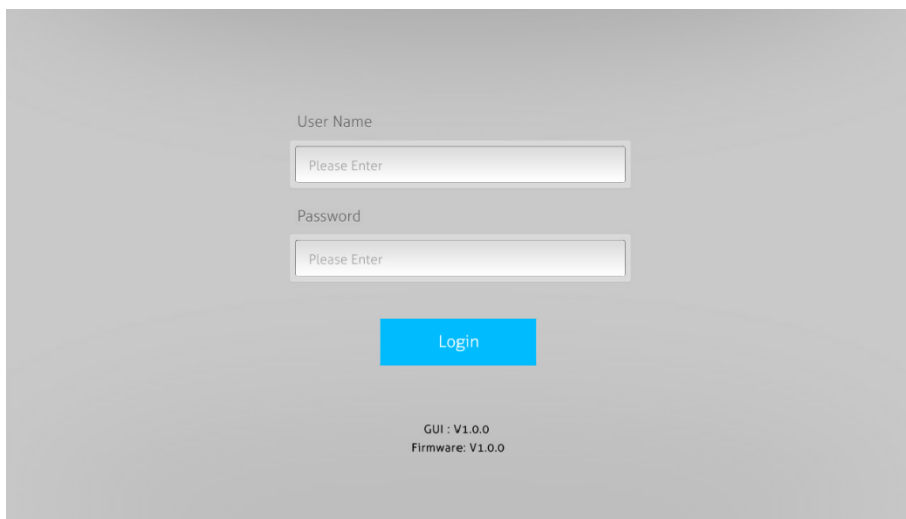

User Name

Password

Login

GUI: V1.0.0
Firmware: V1.0.0

Username: admin

Password: admin

Type the user name and password, and then click **Login** to enter the section for video switching.

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

7.1 Switching Tab



Use the 8x8 button grid on the page to set which inputs are directed to which outputs. For example, clicking the button on the Input 1 row and Output 1 column, directs input 1 to output 1.

Use the 6 numbered buttons under scene area to save and load layout presets.

- To save a given layout, first click one of the numbered buttons, then click the **Save** button.
- To load a previously saved layout, first click one of the numbered buttons, then click the **Recall** button.



7.2 Audio Tab


Audio De-embedded

The screenshot shows a web-based configuration interface for the 'Audio De-embedded' feature. At the top, there is a navigation bar with tabs: 'Switching', 'Audio' (highlighted in blue), 'Configuration', 'CEC', 'RS232', 'Interface', 'Network', and 'Access'. Below the navigation bar, the main content area is titled 'Audio De-embedded'. It contains eight radio button options arranged in two columns: 'Output 1' (selected), 'Output 2', 'Output 3', 'Output 4' in the left column, and 'Output 5', 'Output 6', 'Output 7', 'Output 8' in the right column. At the bottom of the configuration area, there are two buttons: 'Confirm' (highlighted in blue) and 'Cancel' (greyed out).

- OPTICAL & STEREO audio output ports can be de-embedded from 8x HDMI output.


7.3 Configuration Tab

1) PoC

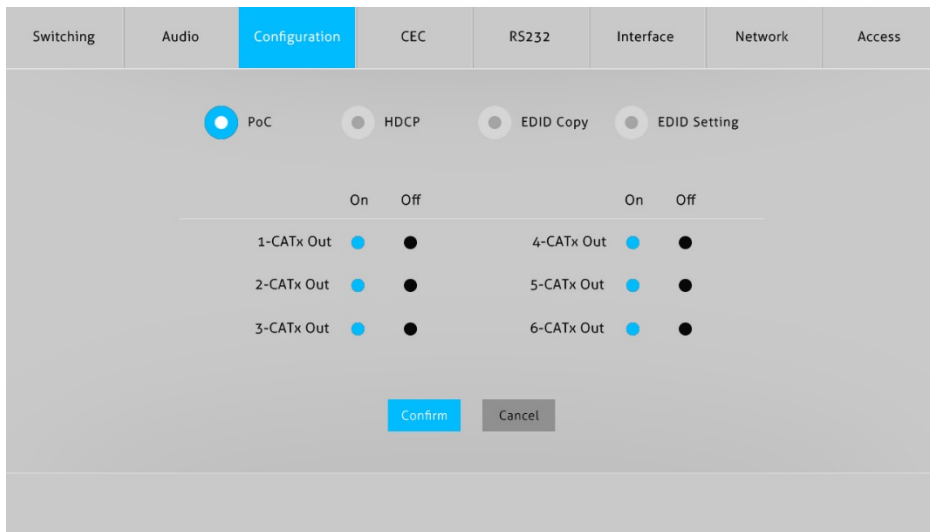

- Turn on or off PoC for 1-CATx ~ 6-CATx output port.

2) HDCP

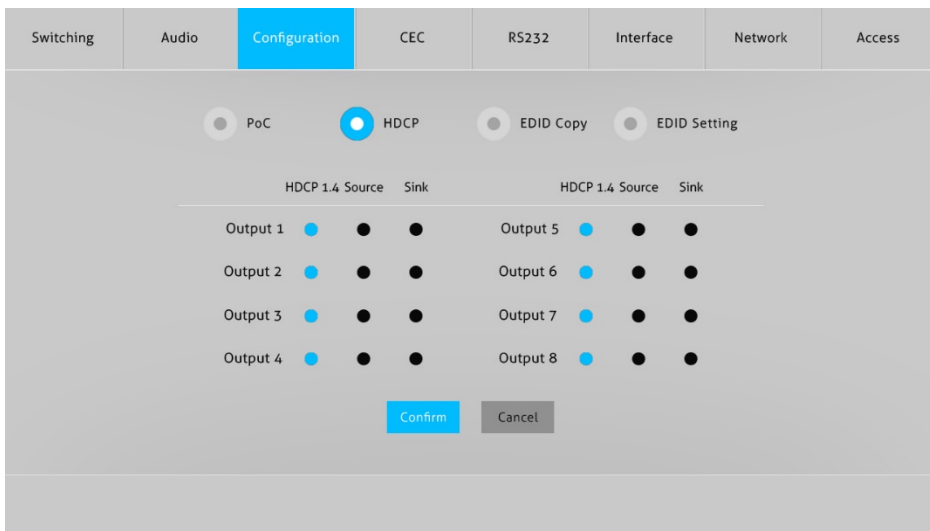

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

- HDCP setting for 8 outputs.

3) EDID Copy

- Copy the EDID of the selected output device to one or more input source device.

4) EDID Setting

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling


- Select the compatible built-in EDID for the selected input source.
- Upload user-defined EDID by the below steps:
 - 1) Prepare the EDID file (.bin) on the control PC.
 - 2) Select the **User-defined**.
 - 3) Click the box , and then select the EDID file (.bin) according the tooltip.
 - 4) Click **Apply** to upload the user-defined EDID, and then click **Confirm** to save setting.

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

7.4 CEC Tab

If the input source devices, HDMI output display devices support CEC, they can be controlled via the following CEC interface.


1) Input Source Device Control

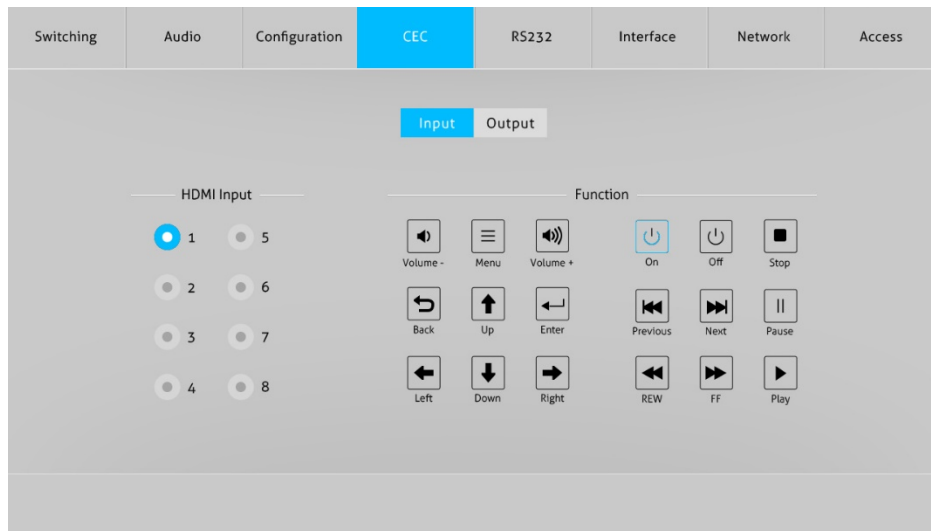

- Select one input source device to be controlled, and then press function buttons.

Note: It can not control two or more input source devices simultaneously.

2) Output Display Device Control

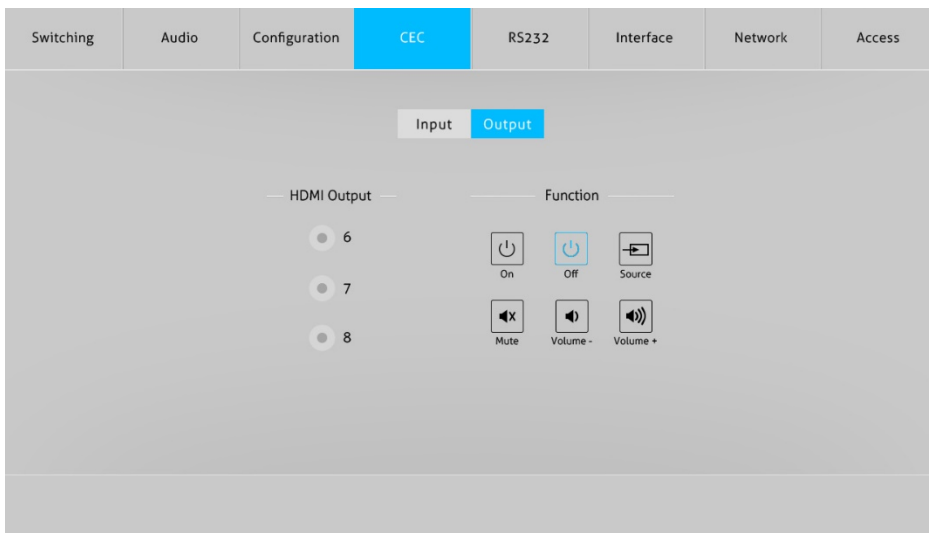

- Select one output device to be controlled, and then press function buttons.

Note: It can not control two or more output devices simultaneously.

7.5 RS232 Tab

| Switching | Audio | Configuration | CEC | RS232 | Interface | Network | Access |
|--|-------|---------------|-----|-------|-----------|---------|--------|
| ASCII <input checked="" type="radio"/> HEX <input type="radio"/> | | | | | | | |
| Baud Rate: 9600 ▼ | | | | | | | |
| Command Ending: NULL ▼ | | | | | | | |
| Command: xxxxxx | | | | | | | |
| <input type="button" value="Confirm"/> <input type="button" value="Cancel"/> | | | | | | | |

- ASCII or HEX command format can be selected.
- Baud Rate: Supports 2400, 4800, 9600, 19200, 38400, 57600 or 115200.
- Command Ending: NULL, CR, LF or CR+LF can be chosen.
- Command: Type the command in this box to control the third-party device which is connected to the RS232 port of the switcher.

7.6 Interface Tab

| Switching | Audio | Configuration | CEC | RS232 | Interface | Network | Access | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--------------------------------------|---------------|--------------------------------------|--------|---------------------------------------|---------|---------------------------------------|-------|--|--|--|--------|--|--|--|----|--------------------------------------|----|--------------------------------------|----|---------------------------------------|----|---------------------------------------|----|--------------------------------------|----|--------------------------------------|----|---------------------------------------|----|---------------------------------------|----|--------------------------------------|----|--------------------------------------|----|---------------------------------------|----|---------------------------------------|----|--------------------------------------|----|--------------------------------------|----|---------------------------------------|----|---------------------------------------|
| <p>Title Bar Label: <input type="text"/></p> <p>Button Labels:</p> <table><thead><tr><th colspan="4">Input</th><th colspan="4">Output</th></tr></thead><tbody><tr><td>1:</td><td><input type="text" value="Input 1"/></td><td>5:</td><td><input type="text" value="Input 5"/></td><td>1:</td><td><input type="text" value="Output 1"/></td><td>5:</td><td><input type="text" value="Output 5"/></td></tr><tr><td>2:</td><td><input type="text" value="Input 2"/></td><td>6:</td><td><input type="text" value="Input 6"/></td><td>2:</td><td><input type="text" value="Output 2"/></td><td>6:</td><td><input type="text" value="Output 6"/></td></tr><tr><td>3:</td><td><input type="text" value="Input 3"/></td><td>7:</td><td><input type="text" value="Input 7"/></td><td>3:</td><td><input type="text" value="Output 3"/></td><td>7:</td><td><input type="text" value="Output 7"/></td></tr><tr><td>4:</td><td><input type="text" value="Input 4"/></td><td>8:</td><td><input type="text" value="Input 8"/></td><td>4:</td><td><input type="text" value="Output 4"/></td><td>8:</td><td><input type="text" value="Output 8"/></td></tr></tbody></table> <p><input type="button" value="Confirm"/> <input type="button" value="Cancel"/></p> | | | | | | | | Input | | | | Output | | | | 1: | <input type="text" value="Input 1"/> | 5: | <input type="text" value="Input 5"/> | 1: | <input type="text" value="Output 1"/> | 5: | <input type="text" value="Output 5"/> | 2: | <input type="text" value="Input 2"/> | 6: | <input type="text" value="Input 6"/> | 2: | <input type="text" value="Output 2"/> | 6: | <input type="text" value="Output 6"/> | 3: | <input type="text" value="Input 3"/> | 7: | <input type="text" value="Input 7"/> | 3: | <input type="text" value="Output 3"/> | 7: | <input type="text" value="Output 7"/> | 4: | <input type="text" value="Input 4"/> | 8: | <input type="text" value="Input 8"/> | 4: | <input type="text" value="Output 4"/> | 8: | <input type="text" value="Output 8"/> |
| Input | | | | Output | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1: | <input type="text" value="Input 1"/> | 5: | <input type="text" value="Input 5"/> | 1: | <input type="text" value="Output 1"/> | 5: | <input type="text" value="Output 5"/> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2: | <input type="text" value="Input 2"/> | 6: | <input type="text" value="Input 6"/> | 2: | <input type="text" value="Output 2"/> | 6: | <input type="text" value="Output 6"/> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3: | <input type="text" value="Input 3"/> | 7: | <input type="text" value="Input 7"/> | 3: | <input type="text" value="Output 3"/> | 7: | <input type="text" value="Output 7"/> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4: | <input type="text" value="Input 4"/> | 8: | <input type="text" value="Input 8"/> | 4: | <input type="text" value="Output 4"/> | 8: | <input type="text" value="Output 8"/> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

- Modify the title bar label.
- Modify the button labels.

7.7 Network Tab

| Switching | Audio | Configuration | CEC | RS232 | Interface | Network | Access |
|--|-------|---------------|-----|-------|-----------|---------|--------|
| <p>MAC Address: 44-33-4C-C9-35-12</p> <p>DHCP <input checked="" type="checkbox"/> Static IP <input type="checkbox"/></p> <p>IP Address: <input type="text" value="192.168.0.178"/></p> <p>Subnet Mask: <input type="text" value="255.255.255.0"/></p> <p>Gateway: <input type="text" value="192.168.0.1"/></p> <p><input type="button" value="Confirm"/></p> | | | | | | | |

- Static IP or Dynamic Host Configuration Protocol (DHCP).
- Modify the static IP Address, Subnet Mask, and Gateway.

7.8 Access Tab


| Switching | Audio | Configuration | CEC | RS232 | Interface | Network | Access |
|---|-------|---------------|-----|-------|-----------|---------|--------|
| <p>Credentials</p> <p>Password: <input type="text" value="admin"/> <input type="button" value="Confirm"/></p> <p>Firmware Upgrade</p> <p><input type="text" value="C:\\"/> <input type="button" value="Confirm"/></p> <p>Front Panel Lock</p> <p>ON <input checked="" type="checkbox"/> OFF</p> | | | | | | | |

- Modify the login password.
- Upgrade the MCU firmware.
- Lock or unlock the front panel buttons.

7.9 GUI Upgrade

Please visit at <http://192.168.0.178:100> for GUI online upgrade.

Type the username and password (the same as the GUI log-in setting, modified password will be available only after rebooting) to login the configuration interface. After that, click **Administration** in the source menu to get to **Upload Firmware** as shown below:

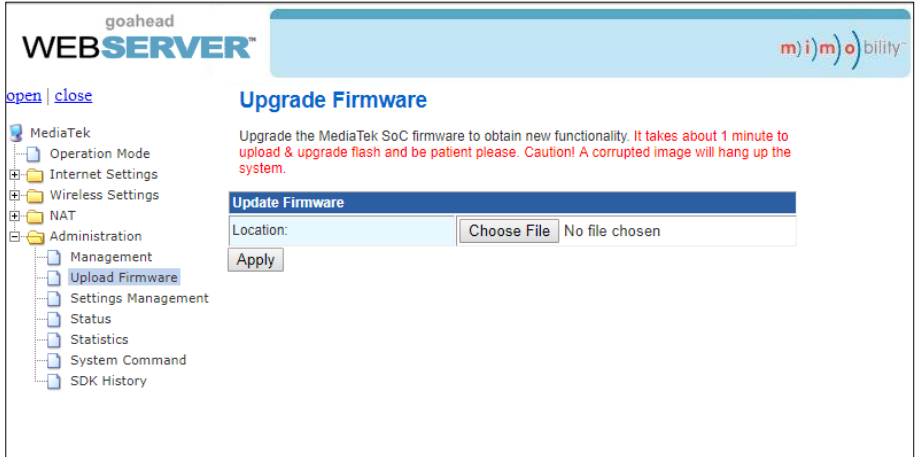

Select the desired update file and press **Apply**, it will start upgrading then.

8. RS232 Control

8.1 RS232 Control Software

- **Installation** Copy the control software file to the computer connected with NPG-MX88E-H2.
- **Uninstallation** Delete all the control software files in corresponding file path.


8.2 Basic Settings

Firstly, connect NPG-MX88E-H2 with necessary input devices and output devices. Then, connect it with a PC installed RS232 control software. Double-click the software icon to run this software.

Here we take the software **CommWatch.exe** as example. The icon is showed as below:



The interface of the control software is showed as below:

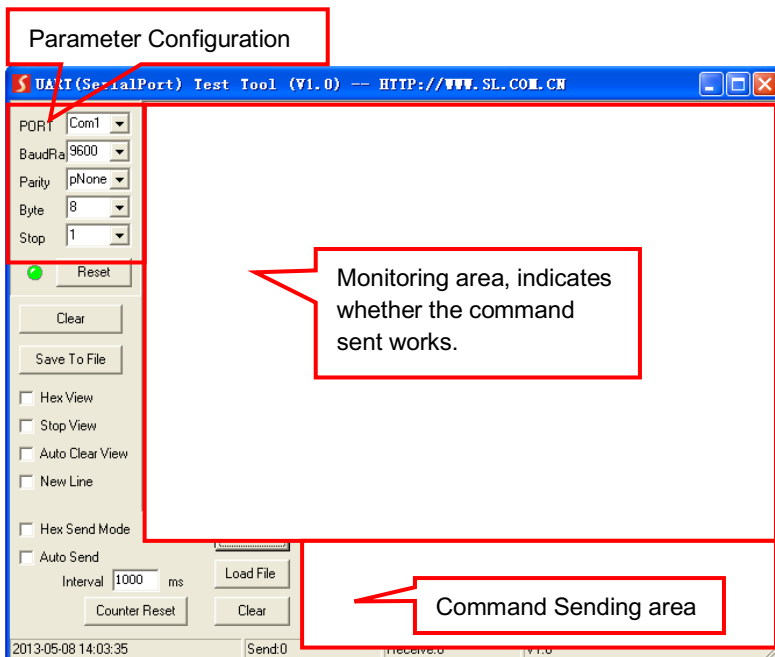

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

Set the parameters (baud rate, data bit, stop bit and parity bit) correctly to ensure reliable RS232 control.

8.3 RS232 Communication Commands



- Case-sensitive.
- “[, ”] in the commands are for easy recognition only and not necessary in real operations. Other symbols including “.”, “,”, “/”, “%”, “;”, “^”. are parts of the commands.
- Feedbacks listed in the column “Feedback Example” are only for reference, feedbacks may vary according to different operations.

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

8.3.1 System Commands

| Command | Function | Feedback Example |
|----------|-------------------------------|------------------------------|
| PowerON | Power on | Power ON! |
| PowerOFF | Power off | Power OFF! |
| *Name | Query the name of matrix | NPG-MX88E-H2 |
| *Type | Query the model of matrix | HDMI 2.0 8x8 Matrix Switcher |
| *Version | Query the version of firmware | V1.0.0 CPLD:V1.0.0 |
| RST | Reset to factory default. | Factory Default! |

8.3.2 Control Management

| Command | Function | Feedback Example |
|---------------|---|--|
| OUT[xx]:[YY]. | Output port select input port. [xx]=00~08, xx=01~08 is the number of output port, if the xx=00, it means all output ports. [YY]=01~08, | Output 01 Switch To In 01! Analog Out 01 Switch To Video Out 01! Analog Out 02 Switch To Video Out 01! Output 02 Switch To In |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|-------------------|---|---|
| | YY=01~08 is the number of input port. | 01! Output 03 Switch To In 01! Output 04 Switch To In 01! Output 05 Switch To In 01! Output 06 Switch To In 01! Output 07 Switch To In 01! Output 08 Switch To In 01! |
| @OUT[xx]. | Able HDMI 5V of output port. [xx]=00~08, xx=01~08 is the number of output port, if the xx=00, it means all output ports. | Turn ON Output 01! Turn ON Output 02! Turn ON Output 03! Turn ON Output 04! Turn ON Output 05! Turn ON Output 06! Turn ON Output 07! Turn ON Output 08! |
| \$OUT[xx]. | Disable HDMI 5V of output port. [xx]=00~08, xx=01~08 is the number of output port, if the xx=00, it means all output ports. | Turn OFF Output 01! Turn OFF Output 02! Turn OFF Output 03! Turn OFF Output 04! Turn OFF Output 05! Turn OFF Output 06! Turn OFF Output 07! Turn OFF Output 08! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

8.3.3 Query Commands

| Command | Function | Feedback Example |
|---------------------------------------|---|--|
| GetGuiIP. | Query GUI IP | GUI_IP:192.168.0.178! |
| SetGuiIP:xxx. xxx.xxx.xxx. | Set GUI IP | SetGuiIP:192.168.0.178! |
| Baudratexxxx . | Set the baud rate of local serial port. | Baudrate9600. |
| | xxxx=115200, 57600, 38400, 19200,or 9600 | Set Local RS232 Baudrate Is 9600! |
| STA. | Query Status | GUI Or RS232 Query Status: PTN NPG-MX88E-H2 V1.0.0 Power ON! Front Panel UnLock! Local RS232 Baudrate Is 115200! GUI_IP:192.168.0.150! |
| STA_POUT. | Query 5V Status of output port. | Turn ON Output 01! Turn ON Output 02! Turn ON Output 03! Turn ON Output 04! Turn ON Output 05! Turn ON Output 06! Turn ON Output 07! Turn ON Output 08! |
| STA_IN. | Query 5V Status of input port. | IN 1 2 3 4 5 6 7 8 LINK Y Y Y N Y Y Y Y |
| STA_OUT. | Query HPD Status of output. | OUT 1 2 3 4 5 6 7 8 LINK Y N Y Y Y Y Y Y |
| STA_VIDEO. | Query the input source of output port. | Output 01 Switch To In 01! Output 02 Switch To In 02! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|-----------------------|--|---|
| | | Output 03 Switch To In 04! Output 04 Switch To In 01! Output 05 Switch To In 03! Output 06 Switch To In 06! Output 07 Switch To In 04! Output 08 Switch To In 07! |
| STA_HDCP. | Query current using HDCP model of all output ports. 01-08 represents output port 1-8. | OUT 01 HDCP PASSIVE! OUT 02 HDCP PASSIVE! OUT 03 HDCP MAT DISPLAY! OUT 04 HDCP BYPASS! OUT 05 HDCP PASSIVE! OUT 06 HDCP PASSIVE! OUT 07 HDCP PASSIVE! OUT 08 HDCP PASSIVE! |
| STA_AUDIO. | Query audio switch and volume status of analog audio. | Audio Out 01 Switch To Video Out 05! Analog Out 01 Volume UnMute! Analog Out 01 Volume 50! Audio Out 02 Switch To Video Out 05! Analog Out 02 Volume Mute! Analog Out 02 Volume 32! ... Analog Out 08 Volume Mute! Analog Out 08 Volume 75! |
| PresetSta[xx]. | Save the scene | Preset 09 Save Success! Preset 09 Sta: |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|--------------------------|--------------|---|
| | | Out 01 In 01! Out 02 In 04! Out 03 In 05! Out 04 In 04! Out 05 In 06! Out 06 In 03! Out 07 In 06! Out 08 In 08! |
| PresetRecall[xx]. | Scene recall | Preset 09 Recall: Output 01 Switch To In 02! Output 02 Switch To In 02! Output 03 Switch To In 02! Output 04 Switch To In 02! Output 05 Switch To In 04! Audio Out 01 Switch To Video Out 05! Audio Out 02 Switch To Video Out 05! Audio Out 03 Switch To Video Out 05! Audio Out 04 Switch To Video Out 05! Audio Out 05 Switch To Video Out 05! Audio Out 06 Switch To Video Out 05! Audio Out 07 Switch To Video Out 05! Audio Out 08 Switch To Video Out 05! Output 06 Switch To In 04! Output 07 Switch To In 04! Output 08 Switch To In |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|----------------|-----------------|-------------------------|
| | | 04! |

8.3.4 Lock/unlock Commands

| Command | Function | Feedback Example |
|----------------|---------------------------------|-------------------------|
| Lock. | Lock the front panel buttons. | Front Panel Locked! |
| Unlock. | Unlock the front panel buttons. | Front Panel UnLock! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

8.3.5 Audio Commands

| Command | Function | Feedback Example |
|--------------------------|---|---|
| AUDIO[xx]:[YY] | <p>SPDIF OUT and ANALOG OUT(They are same input audio source at one group) select which input audio source.</p> <p>[xx]=00~08 xx=01~08 is the number of the output port, if the xx=00, it means all output ports.</p> <p>[yy]=01~16 yy=01~08, it means de-embedded audio from HDMI1-8 input, if the yy=09~16, it means de-embedded audio from HDMI1-8 output.</p> | <p>Audio Out 01 Switch To Video Out 05!</p> <p>Audio Out 02 Switch To Video Out 05!</p> <p>Audio Out 03 Switch To Video Out 05!</p> <p>Audio Out 04 Switch To Video Out 05!</p> <p>Audio Out 05 Switch To Video Out 05!</p> <p>Audio Out 06 Switch To Video Out 05!</p> <p>Audio Out 07 Switch To Video Out 05!</p> <p>Audio Out 08 Switch To Video Out 05!</p> |
| AVOLUME[xx]:[YY]. | <p>[xx]=00~08 xx=01~08 is the number of the Analog output port, if the xx=00, it means all Analog output ports.</p> <p>[YY]="V+" means volume up, [YY]="V-" means volume down, [YY]="MU" means Mute, [YY]="UM" means <u>U</u>nMute, [YY]=00-100 means setting volume</p> | <p>1. Analog Out 01 Volume 55!</p> <p>2. Analog Out 02 Volume 32!</p> <p>3. Analog Out 01 Volume Mute!</p> <p>4. Analog Out 01 Volume UnMute!</p> <p>5. Analog Out 01 Volume 50!</p> |

8.3.6 HDCP Compliance

| Command | Function | Feedback Example |
|---------------------|--|---|
| HDCP[xx]ON. | <p>Force able and output HDCP 1.4.</p> <p>[xx]=00~08, xx=01~08 is the number of output port, if the xx =00, it means all output ports.</p> | <p>OUT 01 HDCP ON!</p> <p>OUT 02 HDCP ON!</p> <p>OUT 03 HDCP ON!</p> <p>OUT 04 HDCP ON!</p> <p>OUT 05 HDCP ON!</p> <p>OUT 06 HDCP ON!</p> <p>OUT 07 HDCP ON!</p> <p>OUT 08 HDCP ON!</p> |
| HDCP[xx]OFF. | <p>Force disable the output HDCP.</p> | <p>OUT 01 HDCP OFF!</p> |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|---------------------|---|--|
| | [xx]=00~08, xx=01~08 is the number of output port, if the xx=00, it means all output ports. | OUT 02 HDCP OFF! OUT 03 HDCP OFF! OUT 04 HDCP OFF! OUT 05 HDCP OFF! OUT 06 HDCP OFF! OUT 07 HDCP OFF! OUT 08 HDCP OFF! |
| HDCP[xx]MAT. | Output HDCP follows the display. [xx] =00~08, xx=01~08 is the number of output port, if the xx =00, it means all output ports. | OUT 01 HDCP MAT Display! OUT 02 HDCP MAT Display! OUT 03 HDCP MAT Display! OUT 04 HDCP MAT Display! OUT 05 HDCP MAT Display! OUT 06 HDCP MAT Display! OUT 07 HDCP MAT Display! OUT 08 HDCP MAT Display! |
| HDCP[xx]PAS. | Output HDCP follows the value and status of input source device. [xx] =00~08, xx=01~08 is the number of output port, if the xx =00, it means all output ports. | OUT 01 HDCP PASSIVE! OUT 02 HDCP PASSIVE! OUT 03 HDCP PASSIVE! OUT 04 HDCP PASSIVE! OUT 05 HDCP PASSIVE! OUT 06 HDCP PASSIVE! OUT 07 HDCP PASSIVE! OUT 08 HDCP PASSIVE! |
| HDCP[xx]BYP. | Output HDCP follows input HDCP. Input has HDCP, output is HDCP1.4. Input doesn't have HDCP, output is without HDCP. [xx] =00~08, xx=01~08 is the number of output port, if the xx =00, it means all output ports. | OUT 01 HDCP BYPASS! OUT 02 HDCP BYPASS! OUT 03 HDCP BYPASS! OUT 04 HDCP BYPASS! OUT 05 HDCP BYPASS! OUT 06 HDCP BYPASS! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|---------|----------|--|
| | | OUT 07 HDCP BYPASSS! OUT 08 HDCP BYPASSS! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

8.3.7 EDID Management

| Command | Function | Feedback Example |
|------------------|---|---|
| EDIDMInit. | Restore the factory default EDID data for each input. | All Input EDID Set Default! System Initialization..... PTN1111 NPG-MX88E-H2 V1.0.0 Power ON! Front Panel UnLock! |
| EDIDUpgrade[xx]. | <p>Upgrade EDID via Serial Port</p> <ul style="list-style-type: none"> [xx]=00~08 <p>xx=01~08 is the number of the port(able EDID user-defined for corresponding HDMI input), if the xx=00, it means all ports(able EDID user-defined for all HDMI inputs).</p> <p>Note: EDID user-defined can be used once, if switch to another EDID or exit, it will not be saved.</p> <ul style="list-style-type: none"> [xx]=U. <p>xx=U means user-defined for built-in EDID(It can be saved in machine for using at any time).</p> <p>Note: <i>It can user-defined only one built-in EDID, after finishing it, machine still use previous built-in EDID.</i></p> <p>When received commands, machine will remind EDID file (.bin) to send within 10 seconds.</p> <p>Note: <i>In order to guarantee the data to be normal received, need to disconnect all CATx output before sending the command(s)</i></p> | <p>File size: 256 Baud rate:115200bps Quired time: About 0 second Please wait... Send Completed! User Define EDID Upgrade OK By RS232 Or GUI!</p> |
| EDID/[xx]/[yy]. | Input ports xx use built-in EDID yy [xx]=00~08 | Input All EDID Upgrade OK By 09 Internal EDID! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|------------------------|--|--|
| | xx=01~08 is the number of the input port, if the xx=00, it means all input ports. [yy]=01~09 yy=01~08, it means built-in EDID that can not be user-defined, if the yy=09, it means user-defined EDID. | |
| EDIDGOUT[XX]. | Read and print EDID of HDMI output, [XX]=01~08 is the number of the output port. | EDIDOUT04: |
| EDIDM[xx]B[yy] | Input port [yy] follows the EDID from output port [xx]. [xx]=01~08 xx=01~08 is the number of the output port. [yy]=00~08 yy=01~08 is the number of input port, if the yy=00, it means all input ports. | Input 06 EDID Upgrade OK By 01 EXT EDID! |
| /+[X]/[yy]:xxx. | Send serial data to local. [X]= 1--2400; 2--4800; 3--9600; 4--19200; 5--38400; 6--57600; 7--115200. [yy] means the output port that sent serial data, yy=01 means local output. | xxx. |
| EDIDSTA[xx]. | Query EDID status of Input port. [xx]=00~08, xx=01~08 is the number of input port, if the xx=00, it means all input ports. Note: <ul style="list-style-type: none"> If built-in EDID09 is not user-defined, when querying it, the input port will use EDID6 Internal EDID instead. For example, send "EDID/03/09.", "EDIDSTA03.", and the result is "Input 03 EDID From 06" | Input 01 EDID From 01 Internal EDID! Input 02 EDID From 02 Internal EDID! Input 03 EDID From 03 Internal EDID! Input 04 EDID From 06 Internal EDID! Input 05 EDID From 06 Internal EDID! Input 06 EDID From 06 Internal EDID! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| Command | Function | Feedback Example |
|---------|---|--|
| | <p><i>Internal EDID!</i></p> <ul style="list-style-type: none"> <i>If built-in EDID09 is user-defined, when querying it, the input port will use the user-defined EDID. For example, send "EDID/03/09.", "EDIDSTA03.", and the result is "Input 03 EDID From User Define EDID!".</i> <i>If directly user-define the port EDID, when querying it, the input port will use the user-defined EDID. For example, send "EDIDSTA03.", and the result is "Input 3 EDID From User Define EDID!"</i> | <p>Input 07 EDID From 06 Internal EDID! Input 08 EDID From User Define EDID!</p> |

8.3.8 CEC Control

If the input sources, CATx output devices and local HDMI output devices are supports CEC, they can be controlled by sending the following command instead of IR remote.

CEC[I][O][AA][BB][CC][DD].

- The "[I]" represents the input port. The "[O]" represents the output port.
- The "[AA]" represents the port number. The HDMI input ports are 01~08. The HDMI output ports are 01~08.
- The "[AA]" is "FF" for sending command to all input or output ports.
- The "[BB]" represents the device type (e.g. TV: 40/20/80; Blu-ray DVD: 04/08).
- The "[CC]" represents the CEC function type (e.g. "44": Remote control).
- The "[DD]" represents the specific command from the table below.

✓ Control the input source:

| Command | Description | Command Example and Response |
|---------------------|----------------------------|------------------------------|
| CECI[AA][BB][CC]00. | Confirm operation (Enter). | CECI02044400 |
| | | CEC Input 02 Send Success! |

8x8 HDMI V2.0 Matrix with Audio Breakout & Downscaling

| | | |
|---------------------|------------------|----------------------------|
| CECI[AA][BB][CC]01. | UP direction. | CECI01044401. |
| | | CEC Input 01 Send Success! |
| CECI[AA][BB][CC]02. | DOWN direction. | CECI01044402. |
| | | CEC Input 01 Send Success! |
| CECI[AA][BB][CC]03. | LEFT direction. | CECI03044403. |
| | | CEC Input 03 Send Success! |
| CECI[AA][BB][CC]04. | RIGHT direction. | CECI03044404. |
| | | CEC Input 03 Send Success! |
| CECI[AA][BB][CC]09. | Back to submenu. | CECI03044409. |
| | | CEC Input 03 Send Success! |
| CECI[AA][BB][CC]0A. | Enter main menu. | CECI0304440A. |
| | | CEC Input 03 Send Success! |
| CECI[AA][BB][CC]0D. | Exit menu. | CECI0204440D. |
| | | CEC Input 02 Send Success! |
| CECI[AA][BB][CC]6D. | Power on. | CECI0204446D. |
| | | CEC Input 02 Send Success! |
| CECI[AA][BB][CC]6C. | Power off. | CECI0204446C. |
| | | CEC Input 02 Send Success! |

✓ Control the output display device:

| Command | Description | Command Example and Response |
|---------------------|--------------|------------------------------|
| CECO[AA][BB][CC]41. | Volume up. | CECO05404441. |
| | | CEC Output 05 Send Success! |
| CECO[AA][BB][CC]42. | Volume down. | CECO05404442. |
| | | CEC Output 05 Send Success! |
| CECO[AA][BB][CC]43. | Mute | CECO05404443. |
| | | CEC Output 05 Send Success! |
| CECO[AA][BB]04. | Power on. | CECO038004. |
| | | CEC Output 03 Send Success! |
| CECO[AA][BB]36. | Power off. | CECO038036. |
| | | CEC Output 03 Send Success! |

9. Firmware Upgrade

Please follow the steps as below to upgrade firmware by the **FIRMWARE** port on the rear panel:

- 1) Prepare the latest upgrade file and rename it as "08010000.APP" on PC.
- 2) Power off the switcher, and connect the **FIRMWARE** port of switcher to the PC with USB cable.
- 3) Power on the switcher, and then the PC will automatically detect a U-disk named of "BOOTDISK".
- 4) Double-click the U-disk, a file named of "READY.TXT" would be showed.
- 5) Directly copy the latest upgrade file 08010000.APP (.bin) to the "BOOTDISK" U-disk.
- 6) Reopen the U-disk to check the filename "READY.TXT" whether automatically becomes "SUCCESS.TXT", if yes, the firmware was updated successfully, otherwise, the firmware updating is fail, the name of upgrade file (.bin) should be confirm again, and then follow the above steps to update again.
- 7) Remove the USB cable after firmware upgrade.
- 8) After firmware upgrade, the switcher should be restored to factory default by sending command.

10. Troubleshooting and Maintenance

| Problems | Potential Causes | Solutions |
|---|---|--|
| Color losing or no video signal output | The connecting cables may not be connected correctly or it may be broken. | Check whether the cables are connected correctly and in working condition. |
| | Fail or loose connection. | Make sure the connection is good |
| No output image when switching | No signal at the input / output end. | Check with oscilloscope or multimeter if there is any signal at the input/ output end. |
| | Fail or loose connection. | Make sure the connection is good. |
| | The display doesn't support the input resolution. | Switch for another input source or enable the display to learn the EDID data of the input. |
| Cannot control the device via front panel buttons | Front panel buttons are locked. | Send command /%Unlock; or select unlock in GUI interface to unlock. |
| Cannot control the device via IR remote | The battery has run off. | Change for new battery. |
| | The IR remote is broken. | Send it to authorized dealer for repairing. |
| | Beyond the effective range of the IR signal or not pointing at the IR receiver. | Adjust the distance and angle and point right at the IR receiver. |
| | The IR receiver connected to IR EYE port is not with carrier. | Change for an IR receiver with carrier. |
| Power Indicator remains off when powered on | Fail or loose power connection. | Check whether the cables are connected correctly. |
| There is a blank screen on the display when switching | The display does not support the resolution of the video source. | Switch again. |
| | | Manage the EDID data manually to make the resolution of the video source automatically compliant with the output resolution. |

Note: If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

11. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

1) Warranty

The limited warranty period of the product is fixed 3 (three) years.

2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

3) Warranty Exclusions:

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - ✓ Normal wear and tear.
 - ✓ Use of supplies or parts not meeting our specifications.
 - ✓ No certificate or invoice as the proof of warranty.
 - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - ✓ Damage caused by force majeure.
 - ✓ Servicing not authorized by distributor.
 - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

4) Documentation:

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defect has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

Remarks: For further assistance or solutions, please contact your local distributors