


User Manual

WOXCON

SUH4T (PoC)

4K HDBaseT Splitter 1x4

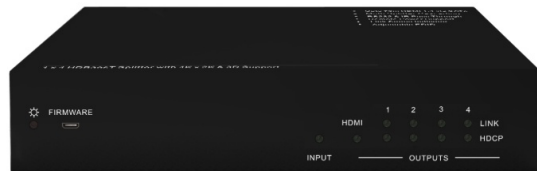

All Rights Reserved

Version: SUH4T_2016V1.2

4K HDBT Splitter 1x4 with PoC

Preface

Read this user manual carefully before using this product. Pictures shown in this manual is for reference only, different model and specifications are subject to real product.

This manual is only for operation instruction only, not for any maintenance usage. In the constant effort to improve our product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

Trademarks

Product model and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without the prior written consent.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



4K HDBT Splitter 1x4 with PoC

SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

4K HDBT Splitter 1x4 with PoC

NOTICE:

1. Pictures shown in this manual are for reference only, different model and specifications are subject to real product.
2. The item PoC is short for Power over Cable.
3. The receiver works with 4K HDBaseT Splitter 1x4 can only be HDMI Twisted Pair PoC Receiver.
4. The item “far-end” means the device (e.g. display device, 3rd party RS232 device etc) connected with HDMI Twisted Pair PoC Receiver.

4K HDBT Splitter 1x4 with PoC**Contents**

1. Introduction	1
1.1 Introduction to 4K HDBaseT Splitter 1x4	1
1.2 Features	1
1.3 Package List	2
2. Panel Description	3
2.1 Front Panel	3
2.2 Rear Panel	4
3. System Connection	5
3.1 Usage Precautions	5
3.2 System Diagram	5
3.3 Connection Procedure	7
3.4 Cascade Connection	7
3.4.1 Cascade AV Signal	7
3.4.2 Cascade Control Signal	7
3.5 Twisted Pair Cable Connection	8
4. Control Modes	9
4.1 IR Control	9
4.1.1 Control far-end device from local	9
4.1.2 Control local device from remote	10
4.2 RS232 Control	11
4.2.1 Installation/uninstallation of RS232 Control Software	11
4.2.2 Basic Settings	11
4.2.3 RS232 Communication Commands	12
4.3 EDID Management	14
5. Specification	15
5.1 Supported Input Video Formats	15
6. Panel Drawing	16
7. Troubleshooting & Maintenance	17
8. After-sales Service	18

4K HDBT Splitter 1x4 with PoC

1. Introduction

1.1 Introduction to 4K HDBaseT Splitter 1x4

4K HDBaseT Splitter 1x4 is an HDBT Splitter accepting 1 HDMI input and distributing to 4 HDBT outputs, plus 1 HDMI local output. The HDMI output socket can be used to monitor local devices or cascade with additional splitter.

4K HDBaseT Splitter 1x4 allows uncompressed 4K (max) HDMI, IR, and RS232 signals to be transmitted over a single CAT5e/6/7 cable. It supports transmission of 4k signal up to 40m and 1080p signal up to 60m. If required, use the HDMI local output to cascade the HDMI signal up to 4 times with additional 4K HDBaseT Splitter 1x4. 4K HDBaseT Splitter 1x4 is also capable of bi-directional IR control, RS232 control, EDID management and PoC.

HDMI Twisted Pair PoC Receiver is recommended to utilize the full function of the HDBT outputs of this device.

1.2 Features

- Compliant with HDMI 1.4& 3D
- Transmit 4k x 2k signal up to 40m and 1080p signal up to 60m
- Support PoC
- Support bi-directional IR control and cascade control
- Support RS232 control and cascade control
- Real-time display of working status via LED indicators
- Support EDID configuration, 5 types in total
- Support cascading via HDMI OUT, IR Loop and RS232 Loop

4K HDBT Splitter 1x4 with PoC

1.3 Package List


- 1 x 4K HDBaseT Splitter 1x4
- 2 x Mounting ears (separate from 4K HDBaseT Splitter 1x4)
- 8 x Screws
- 1 x 3.5mm Male-male Audio cable (used for IR signal cascade)
- 1 x RS232 cable (3-pin captive connector to DB9)
- 1 x RS232 cable (connect 2 3-pin captive connectors for cascading)
- 4 x Plastic cushions
- 1 x Power Cord
- 1 x Power Adapter (DC 24V 2.71A)
- 1 x User Manual

Notes: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

4K HDBT Splitter 1x4 with PoC

2. Panel Description

2.1 Front Panel

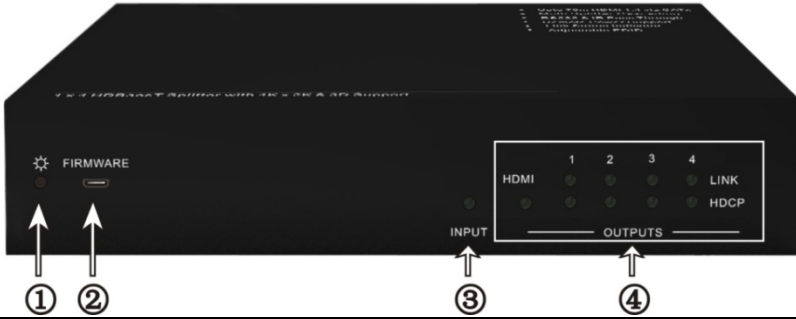


No.	Name	Description
①	Power indicator	Illuminate red once powered on
②	FIRMWARE	USB port, used for firmware update.
③	INPUT	Illuminate green when there is input signal, remain off when there is no input signal
④	OUTPUTS	<p>HDMI:</p> <ul style="list-style-type: none"> ➤ illuminate green when the HDMI source signal is with HDCP ➤ blink green when the HDMI source signal is without HDCP ➤ turn off when there is no input HDMI signal <p>LINK: indicate linking status of the four HDBT sockets, corresponding to the four HDBT sockets separately</p> <ul style="list-style-type: none"> ➤ illuminate green when the corresponding HDBT socket is connected to HDMI Twisted Pair PoC Receiver successfully ➤ turn off when there is no HDMI Twisted Pair PoC Receiver connected to the corresponding socket. <p>HDCP: HDCP compliance indicator, correspondence with the receivers connected to the four HDBT ports</p> <ul style="list-style-type: none"> ➤ illuminate green when the corresponding receiver is with HDCP ➤ blink green when the corresponding receiver is without

4K HDBT Splitter 1x4 with PoC

		<p>HDCP</p> <ul style="list-style-type: none"> ➤ remain off when there is no receiver connected to the corresponding port
--	--	--

Note: Pictures shown in this manual are for reference only, different model and specifications are subject to real product.

2.2 Rear Panel

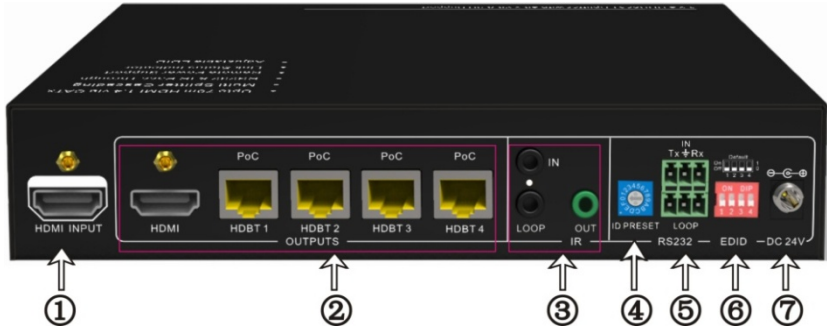

No.	Name	Description
①	HDMI INPUT	Connect with HDMI source device such as DVD/ Blue-ray
②	OUTPUTS	<ul style="list-style-type: none"> ➤ HDMI: Connect to a HDMI display or cascade HDMI AV signal to other displayers by connecting to the HDMI INPUT port of the other 4K HDBaseT Splitter 1x4 ➤ HDBT: HDBT output ports with PoC, 4 in total, connect with IR receivers to transmit HDMI signal
③	IR	<ul style="list-style-type: none"> ➤ IN: Connect with IR Receiver to receive IR signal from IR Emitter. ➤ LOOP: Cascade IR control signal to another HDBT Splitter by connecting to its IR IN socket ➤ OUT: Connect with IR emitter to emit the IR signal received from the receiver side.
④	ID PRESET	Assign ID for 4K HDBaseT Splitter 1x4 to identify every unit, the value may vary from 0~F. After assigning ID, restart 4K HDBaseT Splitter 1x4 for stable performance.
⑤	RS232	<ul style="list-style-type: none"> ➤ IN: connect with control device through 3-pin captive cable ➤ LOOP: cascade RS232 control signal to another splitter by connecting to its RS232 IN port

4K HDBT Splitter 1x4 with PoC

		Note: Please set the communication protocol parameters correctly, and send RS232 commands referring to instructions in 3.6 <i>RS232 Control</i> .
⑥	EDID DIP Switchers	4-pin EDID DIP switchers, “1” stands for “On”, “0” stands for “Off”. Dial the switches to change EDID data referring to the explanations in 4.3 EDID Management.
⑦	DC 24V	Plug a 24V DC power adapter into this socket and tighten the screw.

Note: Pictures shown in this manual are for reference only, different model and specifications are subject to real product.

3. System Connection

3.1 Usage Precautions

- 1) System should be installed in a clean environment and has a prop temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated and safe.
- 3) All devices should be connected before power on.

3.2 System Diagram

4K HDBT Splitter 1x4 with PoC

3.3 Connection Procedure

Step1. Connect a HDMI source device (e.g. Blue-ray DVD) to the **HDMI INPUT** socket of 4K HDBaseT Splitter 1x4 with HDMI cable.

Step2. Connect a HDMI display to **HDMI OUTPUT** socket of 4K HDBaseT Splitter 1x4 with HDMI cable.

Step3. Connect HDMI Twisted Pair PoC Receiver(s) to HDBT output port(s) of 4K HDBaseT Splitter 1x4 with twisted pair.

Step4. Connect control device (e.g. PC) to the **RS232 IN** port of 4K HDBaseT Splitter 1x4.

If you want to cascade RS232 signal among several 4K HDBaseT Splitter 1x4 through RS232 LOOP, connect the **RS232 LOOP** socket of one of them and the **RS232 IN** socket of the next until all 4K HDBaseT Splitter 1x4 have been connected.

Step5. Connect an IR Receiver to the **IR IN** port, and an IR Emitter to the **IR OUT** port. The IR signal can be transmitted bi-directionally between 4K HDBaseT Splitter 1x4 and HDMI Twisted Pair PoC Receiver(s).

If you want to cascade IR signal among several 4K HDBaseT Splitter 1x4, connect the **IR LOOP** socket of one of them and the **IR IN** socket of the next until all 4K HDBaseT Splitter 1x4 have been connected.

Step6. Connect a DC 24V power adapter to the power port of 4K HDBaseT Splitter 1x4, HDMI Twisted Pair PoC Receiver is able to be energized by 4K HDBaseT Splitter 1x4 with PoC solution.

3.4 Cascade Connection

3.4.1 Cascade AV Signal

HDMI source signal can be cascaded to several displays via HDMI OUT/ IN.

Connect the **HDMI OUT** socket of the first 4K HDBaseT Splitter 1x4 to **HDMI IN** socket of the next until all 4K HDBaseT Splitter 1x4 have been connected.


HDMI signals delivered within the first 4K HDBaseT Splitter 1x4 are able to be outputted to other connected 4K HDBaseT Splitter 1x4 too.

3.4.2 Cascade Control Signal

4K HDBaseT Splitter 1x4 supports control cascading via IR LOOP/ RS232 LOOP to enable signal loop output. Users can choose one or multiple cascade methods according to their specified needs.

Here is the cascade connection diagram:

4K HDBT Splitter 1x4 with PoC

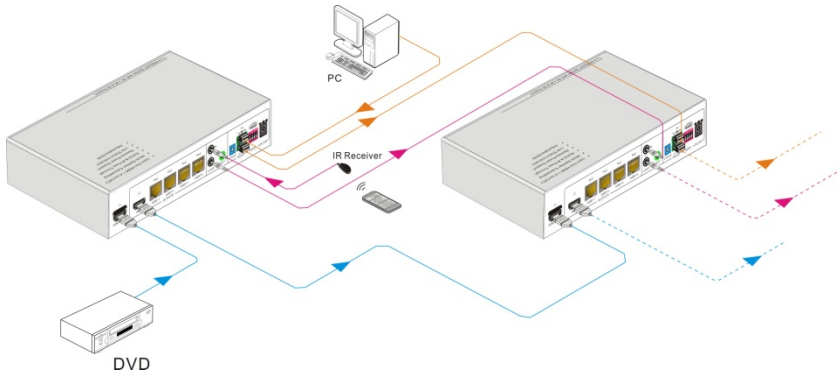

➤ **Cascade through IR Loop**

Connect the **IR LOOP** socket of the first 4K HDBaseT Splitter 1x4 and the **IR IN** socket of the next until all 4K HDBaseT Splitter 1x4 have been connected.

Sending IR signals to the IR Receiver connected to the first 4K HDBaseT Splitter 1x4 will control all cascaded 4K HDBaseT Splitter 1x4.

➤ **Cascade through RS232 Loop**

Connect the **RS232 LOOP** socket of the first 4K HDBaseT Splitter 1x4 and the **RS232 IN** socket of the next until all 4K HDBaseT Splitter 1x4 have been connected.

Sending RS232 commands will control all cascaded 4K HDBaseT Splitter 1x4 synchronously.


Note: To identify 4K HDBaseT Splitter 1x4 in cascading, please set a unique ID for each unit when the cascade connection is done.

3.5 Twisted Pair Cable Connection

The twisted pair used in HDMI Twisted Pair PoC Receiver **MUST** be a straight-through cable. The connectors can be T568A or T568B, but both sides must be the same.

4K HDBT Splitter 1x4 with PoC

TIA/EIA T568A		TIA/EIA T568B	
Pin	Cable color	Pin	Cable color
1	green white	1	orange white
2	green	2	orange
3	orange white	3	green white
4	blue	4	blue
5	blue white	5	blue white
6	orange	6	green
7	brown white	7	brown white
8	brown	8	brown

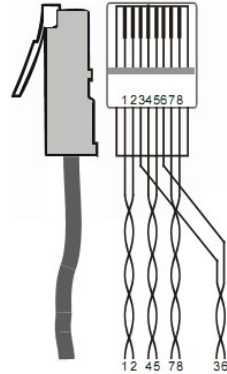

Note: Every pin in pure color groups with its half white pin.

4. Control Modes

4K HDBaseT Splitter 1x4 has a good application in various occasions, such as computer realm, monitoring, conference room, big screen displaying, television education, command & control center and smart home etc.

4K HDBaseT Splitter 1x4 can be controlled via IR, RS232 commands and EDID management.

4.1 IR Control

4K HDBaseT Splitter 1x4 provides with an IR IN port, the port support bi-directional transmission. Connect an IR receiver to the IR IN port, users can control 4K HDBaseT Splitter 1x4/ far-end device from local or control local devices from remote via corresponding IR remote.

4.1.1 Control far-end device from local

Control 4K HDBaseT Splitter 1x4 or far-end display device from local through corresponding IR remote.

4K HDBT Splitter 1x4 with PoC

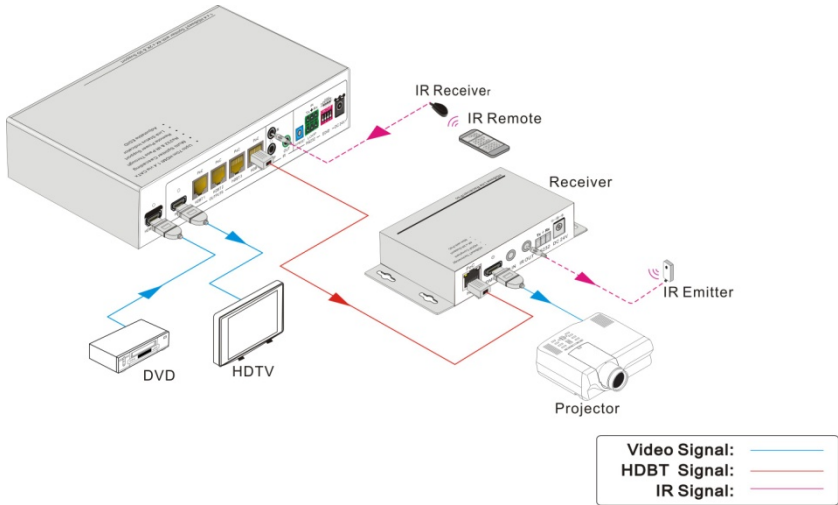


Figure 4- 1 Control far-end device from local

4.1.2 Control local device from remote

Control 4K HDBaseT Splitter 1x4 or local displayer from remote via corresponding IR remote.

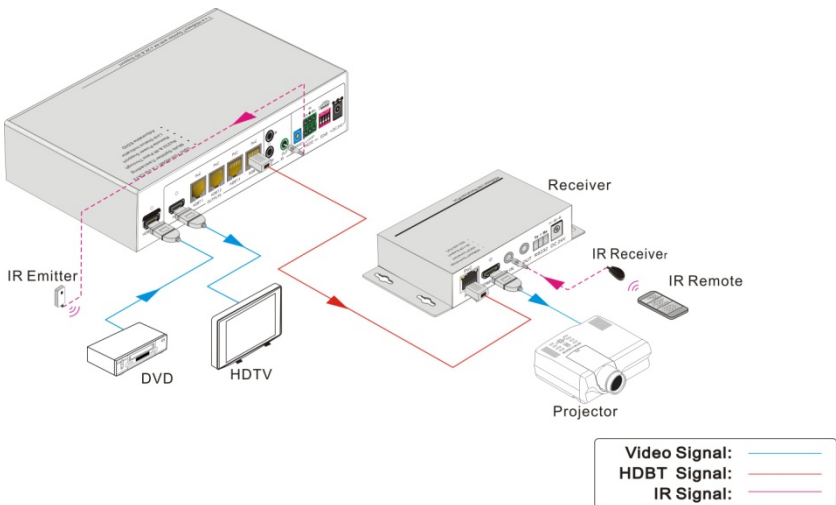


Figure 4- 2 Control local device from remote

4K HDBT Splitter 1x4 with PoC

4.2 RS232 Control

Connect the RS232 ports of 4K HDBaseT Splitter 1x4 and HDMI Twisted Pair PoC Receiver, 4K HDBaseT Splitter 1x4 is capable to control the third party (RS232 device) connected to HDMI Twisted Pair PoC Receiver from local.

Note: 4K HDBaseT Splitter 1x4 can only control third parties with designed baud rates, including 2400, 4800, 9600, 19200, 38400, 57600 and 115200.

4.2.1 Installation/uninstallation of RS232 Control Software

- **Installation** Copy the control software file to the computer connected with 4K HDBaseT Splitter 1x4.
- **Uninstallation** Delete all the control software files in corresponding file path.

4.2.2 Basic Settings


Firstly, connect 4K HDBaseT Splitter 1x4 with an input device and an output device. Then, connect it with a computer which is installed with RS232 control software. Double-click the software icon to run this software.

Here we take the software **CommWatch.exe** as example. The icon is showed as below:



The interface of the control software is showed as below:

4K HDBT Splitter 1x4 with PoC

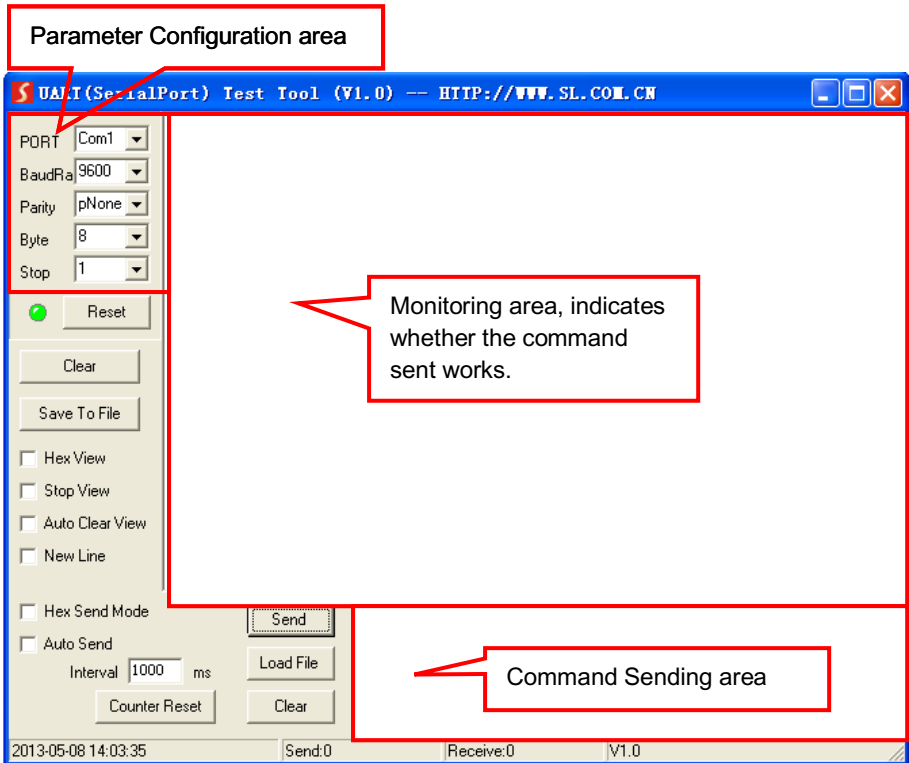

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, only then will you be able to send command in Command Sending Area.

Note: To control 4K HDBaseT Splitter 1x4 via RS232 port, the communication protocol parameters should be configured in the right manner: Baud rate: 9600; Data bit: 8; Stop bit: 1; Parity bit: none.

4.2.3 RS232 Communication Commands

Command	Function	Feedback Example
EDIDUpgrade[x][y].	Upgrade EDID data via serial port; [X] : unit ID, varies from 00~15; [Y] : serial number of embedded EDID, varies from 0~4 (correspond to embedded EDID 1~5 separately). Connect input source and keep energized before sending this	WAIT FOR EDID FILE

4K HDBT Splitter 1x4 with PoC

Command	Function	Feedback Example
	command.	
[X][Y] [Q1],[Q2]\${Z}	Send command to several HDBT outputs port synchronously [X] : unit ID, varies from 00~15; [Y] : serial number of third party's baud rate, varies from 1~7; [Q] : serial number of the HDBT output port, varies from 1~4; [Z] : command to be sent.	
[X][Y][0]\${Z}	Send command to several HDBT output synchronously; [X] : unit ID, varies from 00~15; [Y] : serial number of third party's baud rate, varies from 1~7; [Z] : command to be sent.	
OFF[X][Y1],[Y2],[Y3].	Switch off several outputs of a splitter; [X] : unit ID, varies from 00~15; [Y] : serial number of output port, the value can be 1~5 (1 corresponds to the HDMI output port, 2~5 correspond to HDBT OUT 1~4 separately.)	OFF Y1, Y2, Y3 Y=1~5
OFF[X][0].	Switch off all the outputs of a splitter; [X] : unit ID, varies from 00~15.	OFF All
ON[X][Y1],[Y2],[Y3].	Switch on several outputs of a splitter; [X] : unit ID, varies from 00~15; [Y] : serial number of output port, the value can be 1~5 (1 corresponds to the HDMI output port, 2~5 correspond to HDBT OUT 1~4 separately.)	On Y1, Y2, Y3 Y=1~5

4K HDBT Splitter 1x4 with PoC

Command	Function	Feedback Example
ON[X][0].	Switch on all outputs of a splitter; [X]: unit ID, varies from 00~15.	On All

Note:

1. In above commands, “[” and “]” are symbols for easy reading and do not need to be typed in actual operation.
2. Type in the complete commands including ending symbol “.”.
3. When the unit ID is changed, please reboot the unit before sending commands.
4. Load the desired EDID file to the RS232 control software after sending command **EDIDUpgrade[x][y].** , it will show “EDIDUpgrade success” after the upgrade is completed.
5. To control the third party via RS232 commands, users should type in the correct serial number for the device’s baud rate in the command. Here is a list of the baud rates and their serial numbers:

No.	Baud Rate
1	2400
2	4800
3	9600
4	19200
5	38400
6	57600
7	115200

4.3 EDID Management

4K HDBaseT Splitter 1x4 provides with a 4-pin EDID DIP switcher, “1” stands for “On”, “0” stands for “Off”. Dial the switches to change EDID data referring to the following explanations:

Switcher Status	EDID information
0001	1080P 2D
0010	1080P 3D
0011	720P 2D
0100	720P 3D
0101	DVI 1920x1080

In factory default status (Status: 0000), 4K HDBaseT Splitter 1x4 pass through the

4K HDBT Splitter 1x4 with PoC

signals directly, input& output device process the signal automatically.

EDID data supports upgrade via serial port. Send command **EDIDUpgrade[x][y]**. to upgrade the 5 embedded EDID data separately.

5. Specification

Items	Description
Video Input/output	VESA and SMPTE 480p to 2160p(4K) With 3D Bit depth: 16, 20, 24
Audio Input/output	All HDMI audio formats including Dolby D (TrueHD)/ DTS (HD-Master Audio)/ PCM Channel count: from 2-8 (2.0 to 7.1) Sample rates: 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz
Power Supply	DC 24V 2.71A
HDBT	60m (196feet) with HDMI video, RS232 & IR control, PoC supports HDMI Twisted Pair PoC Receiver
Control	RS232 & IR Full function pass though; RS232 port ID selectable for cascading;
Dimensions	220 x 148 x 44mm (half rack wide)
Raw Materials	Aluminum chassis
Installation	Standard Rack size, provide removable ears for mounting under table, or on wall

5.1 Supported Input Video Formats


Input Resolution	HDMI	DVI
720 x 480@60Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
720 x 480I@30Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
720 x 576@50Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
720 x 576I@25Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1280 x720@50Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1280 x720@60Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1920 x 1080@25Hz	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

4K HDBT Splitter 1x4 with PoC

1920 x 1080@50Hz	☑	☑
1920 x 1080@60Hz	☑	☑
1920 x 1080I@25Hz	☑	☑
1920 x 1080I@30Hz	☑	☑
3840 x 2160@25Hz	☑	
3840 x 2160@30Hz	☑	
3840 x 2160@60Hz	☑	
1080P 3D@60Hz	☑	

Note: 4K HDBaseT Splitter 1x4 supports 4k& 3D HDMI signals, please adopt quality HDMI cables compliant with HDMI1.4 for better transmission when connecting 4K or 3D sources.

6. Panel Drawing

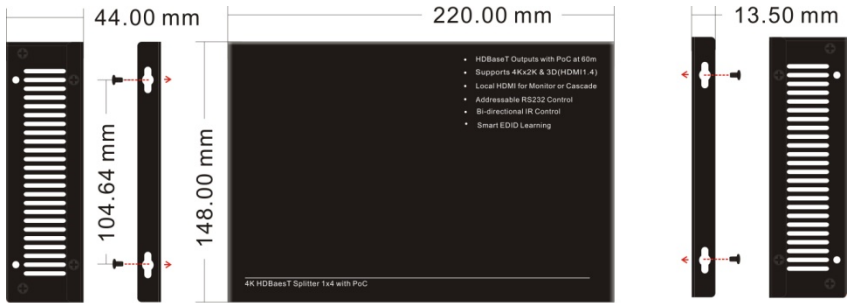

4K HDBT Splitter 1x4 with PoC

7. Troubleshooting & Maintenance

Problems	Causes	Solutions
Color losing or no video signal output in HDMI display	The connecting cables may not be connected correctly or it may be broken.	Check whether the cables are connected correctly and in working condition.
No HDMI signal output in 4K HDBaseT Splitter 1x4 while local HDMI input is in normal working state		
Cannot control 4K HDBaseT Splitter 1x4 by control device (e.g. a PC) through RS232 port	Wrong RS232 communication parameters	Make sure the RS232 communication parameters are correct.
	4K HDBaseT Splitter 1x4 is broken	Send it to authorized dealer for repairing.
Static becomes stronger when connecting the video connectors	Bad grounding	Check the grounding and make sure it is connected well.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

4K HDBT Splitter 1x4 with PoC

8. After-sales Service

If there appear some problems when running the device, please check and deal with the problems referring to this user manual. Any transport costs are borne by the users during the warranty.

1) Product Limited Warranty: It is warranted that the product will be free from defects in materials and workmanship for **three years**, which starts from the first day you buy this product (The purchase invoice shall prevail).

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

2) What the warranty does not cover (servicing available for a fee):

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - Normal wear and tear
 - Use of supplies or parts not meeting our specifications
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by force majeure.
 - Servicing not authorized.
 - Any other causes which does not relate to a product defect
- Delivery, installation or labor charges for installation or setup of the product

3) Technical Support: Email to our after-sales department or make a call, please inform us the following information about your cases.

- Product version and name.
- Detailed failure situations.
- The formation of the cases.

Remarks: For any questions or problems, please try to get help from your local distributor.